



SETUP ACER DL

Setup Acer DL 230V 50Hz complete for automation of single leaf sliding gates.



Code	Leaf	Gear motors	Limit switch	Setup / Pallet
SETUP AC4R DL	400 Kg	AC4R DL	Electromechanical	36
SETUP AC6R DL	600 Kg	AC6R DL	Electromechanical	36
SETUP AC8R DL	800 Kg	AC8R DL	Electromechanical	36
SETUP AC12R DL	1200 Kg	AC12R DL	Electromechanical	36
SETUP AC4RM DL	400 Kg	AC4RM DL	Magnetic	36
SETUP AC6RM DL	600 Kg	AC6RM DL	Magnetic	36
SETUP AC8RM DL	800 Kg	AC8RM DL	Magnetic	36
SETUP AC12RM DL	1200 Kg	AC12RM DL	Magnetic	36

MAXI 2 – Page 120



1 Transmitter
433.92 MHz - Rolling Code

DES – Page 135



1 Key switch for outdoor use

VISIO – Page 138



1 Pair of photocells for outdoor use

SUNLED 23 – Page 142



1 Flashing light with built-in antenna

RG 1R DL



1 Control unit with built-in receiver

TL – Page 116



1 Sign plate

SETUP ACER DL 042

Setup Acer DL 042 230V simple for automation of single leaf sliding gates.



Code	Leaf	Gear motors	Limit switch	Setup / Pallet
SETUP AC4R DL 042	400 Kg	AC4R DL	Electromechanical	36
SETUP AC6R DL 042	600 Kg	AC6R DL	Electromechanical	36
SETUP AC8R DL 042	800 Kg	AC8R DL	Electromechanical	36
SETUP AC12R DL 042	1200 Kg	AC12R DL	Electromechanical	36
SETUP AC4RM DL 042	400 Kg	AC4RM DL	Magnetic	36
SETUP AC6RM DL 042	600 Kg	AC6RM DL	Magnetic	36
SETUP AC8RM DL 042	800 Kg	AC8RM DL	Magnetic	36
SETUP AC12RM DL 042	1200 Kg	AC12RM DL	Magnetic	36

MAXI 2 - Page 120



2 Transmitters
433.92 MHz - Rolling Code

VISIO - Page 138



1 Pair of photocells for outdoor use

SUNLED 23 - Page 142



1 Flashing light with built-in antenna

RG 1R DL



1 Control unit with built-in receiver

TL - Page 116



1 Sign plate